

RidgeMonkey Grilla BBQ

Please read and understand all instructions BEFORE using the product.

OUTDOOR USE ONLY: Never use the Grilla BBQ in an unventilated area, there is a risk of carbon monoxide poisoning associated with all fuel burning appliances. Never use the Grilla BBQ inside an enclosed space. Always ensure adequate ventilation at all times.

CHECK FOR LEAKS: Before every use of the Grilla BBQ, check for gas leaks. If a leak is apparent, DO NOT use the Grilla BBQ – contact RidgeMonkey Customer Services on +44 151 486 7070 immediately for further assistance.

SAFETY GUIDELINES:

NEVER use the Grilla BBQ in an enclosed environment. Always ensure adequate ventilation to minimise the risk of carbon monoxide poisoning.

Check for leaks before every use of the Grilla BBQ. If your product develops a fault, DO NOT continue using it: contact RidgeMonkey Customer Services for further assistance.

Always use on a firm, flat surface and never in direct sunlight. Always keep the gas canister well away from direct heat and possible ignition sources to avoid risk of explosion.

Only use the Grilla BBQ with screw type gas canisters that conform to EN417 safety specifications.

Keep the Grilla BBQ away from children and animals. ALWAYS use the Grilla BBQ in a responsible manner.

Identification of parts

- 1: EN417 gas connector and control valve
- 2: Remote piezo ignition
- 3: Cooking grill
- 4: Flame diffuser shield


5: Flame bar

6: Grilla BBQ frame

7: Folding legs

8: Removable tabletop

Instructions for use

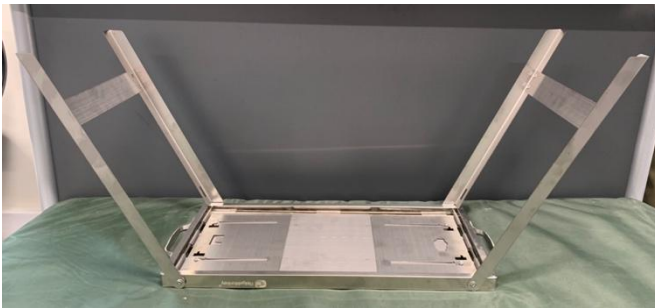

1: Remove Grilla BBQ from carry bag and fold out legs




2: Flip Grilla BBQ and allow hinged frame to fall into place. Set down Grilla BBQ on a solid, level surface.

NOTE: If using coal or other solid fuel place required amount into the base and skip to step 5



3: Slide flame bar into the large aperture on side of Grilla BBQ and hook into slot located on the opposite side.

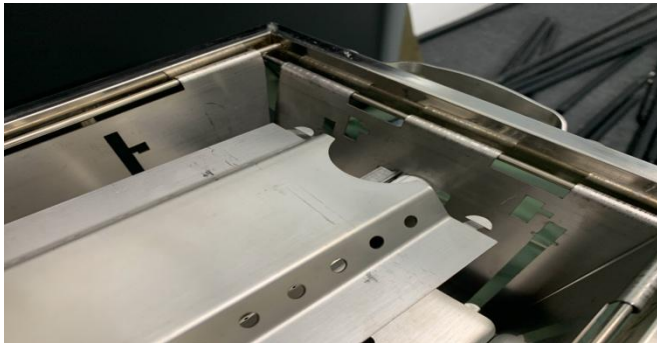

4: Locate flame diffuser shield into allocated slots on both sides



5: Place cooking grill on BBQ




6: Attach side table into allocated slots, fold out legs

NOTE: If using coal or other solid fuel, ignite as required and skip to step 9



7: Attach EN417 compliant gas bottle to the gas connector ensuring a tight seal

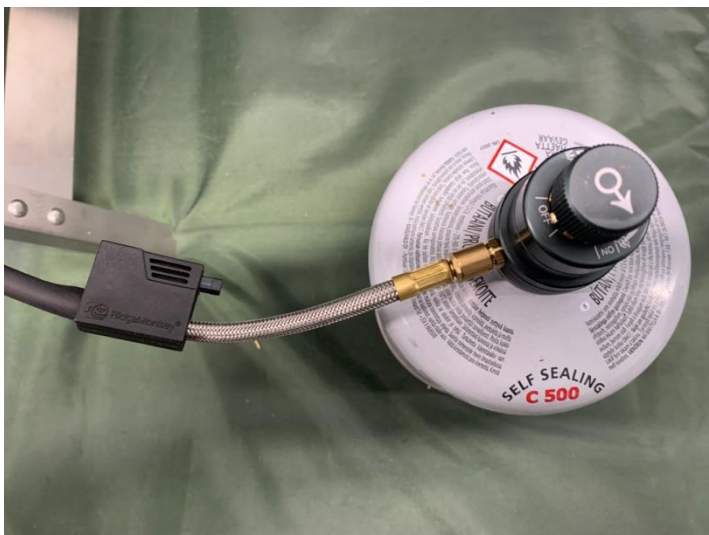

8: Turn gas dial to “ON” and depress remote piezo ignition to ignite. When lit, adjust gas to desired heat level using the control valve.



9: Packing away is a reversal of the above instructions. Ensure gas control valve is turned to the off position, all flames are fully extinguished and all parts of the Grilla BBQ are suitably cool before disconnecting the gas cylinder or handling the product.

Notes

Ensure all O-ring sealing gaskets are well positioned and in good condition before every use. Replace any worn gaskets immediately: spares can be obtained from your local retailer or directly from RidgeMonkey Customer Services.

Never place flammable objects on or near the Grilla BBQ when it is in use. Always keep a minimum distance of at least one metre between Grilla BBQ and any surrounding flammable objects or materials when in use.

Only use the Grilla BBQ for the intended purpose of cooking. Never use the Grilla BBQ for any unintended purpose.

Never touch the body of the Grilla BBQ while in use. Always ensure all flames are extinguished and all parts are suitably cooled before attempting to move or pack away the Grilla BBQ.

Guarantee

RidgeMonkey provides customers with a comprehensive 12 month retailer guarantee on all products. Within the first 12 months following purchase please contact the original retailer for any enquiries if you think you have a faulty product. Damage due to (but not limited to) user negligence, misuse, modification or failure to follow this instruction manual is not covered by any guarantee or warranty. Outside of the initial 12 month purchase period please contact RidgeMonkey Customer Services on +44 151 486 7070 if you require further assistance. Your statutory rights are not affected.

Contact Us

For any enquiries or comments concerning our products, please use the contact form on www.ridgemonkey.co.uk or call the office on +44 151 486 7070, and we will respond to you as soon as possible.